

The Spirit That Moves You!



BUSHWACKER
BodyGear®

Simply The Best

Fender Flares, BedRail & TailGate Caps

**The Driving Force In Design And Style...
Over 35 Years — Taking You On & Off The Road.**








**Design Expertise,
Experienced Engineers
& Quality Materials...
Forming The Ultimate Fender Flare.**

Bushwacker has built its reputation as the leading manufacturer of fender flares and truck accessories on 35 plus years of design and innovation. From the development of our first fender flares for the Ford Bronco to our latest releases, our passion for style and our determination to offer "simply the best" products and unmatched service continues.

Transforming and customizing your truck or SUV with Bushwacker products has never been easier. Our consumer approach to easy installation, our commitment to offering the highest quality products and our unmistakable style -- sets us apart. It's a spirit that you will find in all of our products and throughout the company, it's the spirit that drives us.

Flare Features

- Load-Engineered to grip the side of the vehicle 
- Matte black finish or easily painted to accent any vehicle 
- Designed to blend smoothly with body accent lines 
- Mounting is easy — fasteners hold flares in place, using the existing factory holes 
- Dura-Flex® Thermoplastic - Our exclusive material designed to be durable, yet flexible enough to withstand varying road & weather conditions 
- Limited lifetime warranty

**5 Distinct Fender Flare Styles,
Each Designed to Create a Specific Look.
Customize Your Vehicle to Fit Your Lifestyle!**



Designed For Use With 'Stock' Or 'Standard' Tire And Wheel Packages

- Unique low-profile design focuses on looks more than function, minimal coverage
- Easy to install right out of the box or paint to match or accent your vehicle

(See page 4 for details)



**The Factory Look In An Aftermarket Flare -
Designed For Adding Style As Well As Function**

- Unique design wraps under the vehicle body
- OEM matte black finish - or paint to match
- Provides some additional tire coverage and protection from rocks and road debris

(See page 8 for details)



**Great For Larger Tire & Wheel Packages,
Adds Extended Tire Coverage**

- Adds additional tire coverage - great for large tire and wheel packages
- Gives you that "Limited Edition" look for a fraction of the cost
- Easy to install right out of the box or paint to match or accent your vehicle

(See page 12 for details)



**Bold Pocket Styling... With No Sheet Metal
Drilling Or Cutting!**

- Adds aggressive tire coverage
- No vehicle body side drilling or cutting - installs using the existing factory holes
- Decorative stainless steel hardware for the "bolt-on" look without actually touching the vehicle's surface

(See page 16 for details)



**These Are The Flares That Make Heads Turn...
Our Most Aggressive Look Yet**

- The bold look of Bushwacker pockets
- Offers extreme tire and wheel coverage, allowing you to increase the wheel well opening to accommodate large tires and wheels

(See page 19 for details)

Bushwacker fender flares offer a wide range of specific tire and wheel coverage, often required to make vehicles street legal. Ask your retailer or visit our web site for vehicle specific coverage amounts.

BedRail & TailGate Caps

Available In 3 Styles...
Adding Protection To Your Bed Rails And Tailgate.

(See page 20 for details)





2000-up Chevy Suburban — Street Flares® #40505-02



Determination Moves You.
Style Captivates You.
Success Frees You.
Passion Keeps You.
Reputation Provokes You.



2002-up Dodge Ram 1500
 2003-up 2500/3500
 Street Flares® #50504-02

Bushwacker Street Flares are designed for use with stock tire and wheel packages... adding the finishing touch to any vehicle. The unique low-profile designed Street Flare focuses on looks while adding style to the side of the vehicle.



Street Flares® Key Points

- Great with stock wheel and tire packages
- Focuses on style and looks
- Ease of installation on all vehicle types
- 100% UV protection. No chalking, No cracking, No warping
- Single-piece design and construction
- Integrated design complements the vehicle body lines
- OEM matte black finish, or easily custom painted to match or accent any vehicle

Street
FLARES



1999-up Ford Super Duty
Street Flares® #20504-02



1994-2001 Chevy/GMC
Silverado/Sierra
Street Flares® #40503-02

Street
FLARES



1994-01 Dodge Ram 1500
1994-02 Dodge Ram 2500/3500
Street Flares® #50501-02



2000-up Chevy Tahoe
Street Flares® #40506-02



1997-up Dodge Dakota
Street Flares® #51501-02




2003-up Chevy Siverado
Street Flares® #40507-02



1997-02 Ford Expedition
Street Flares® #20503-02



2000-up Ford Excursion
Street Flares® #20507-02

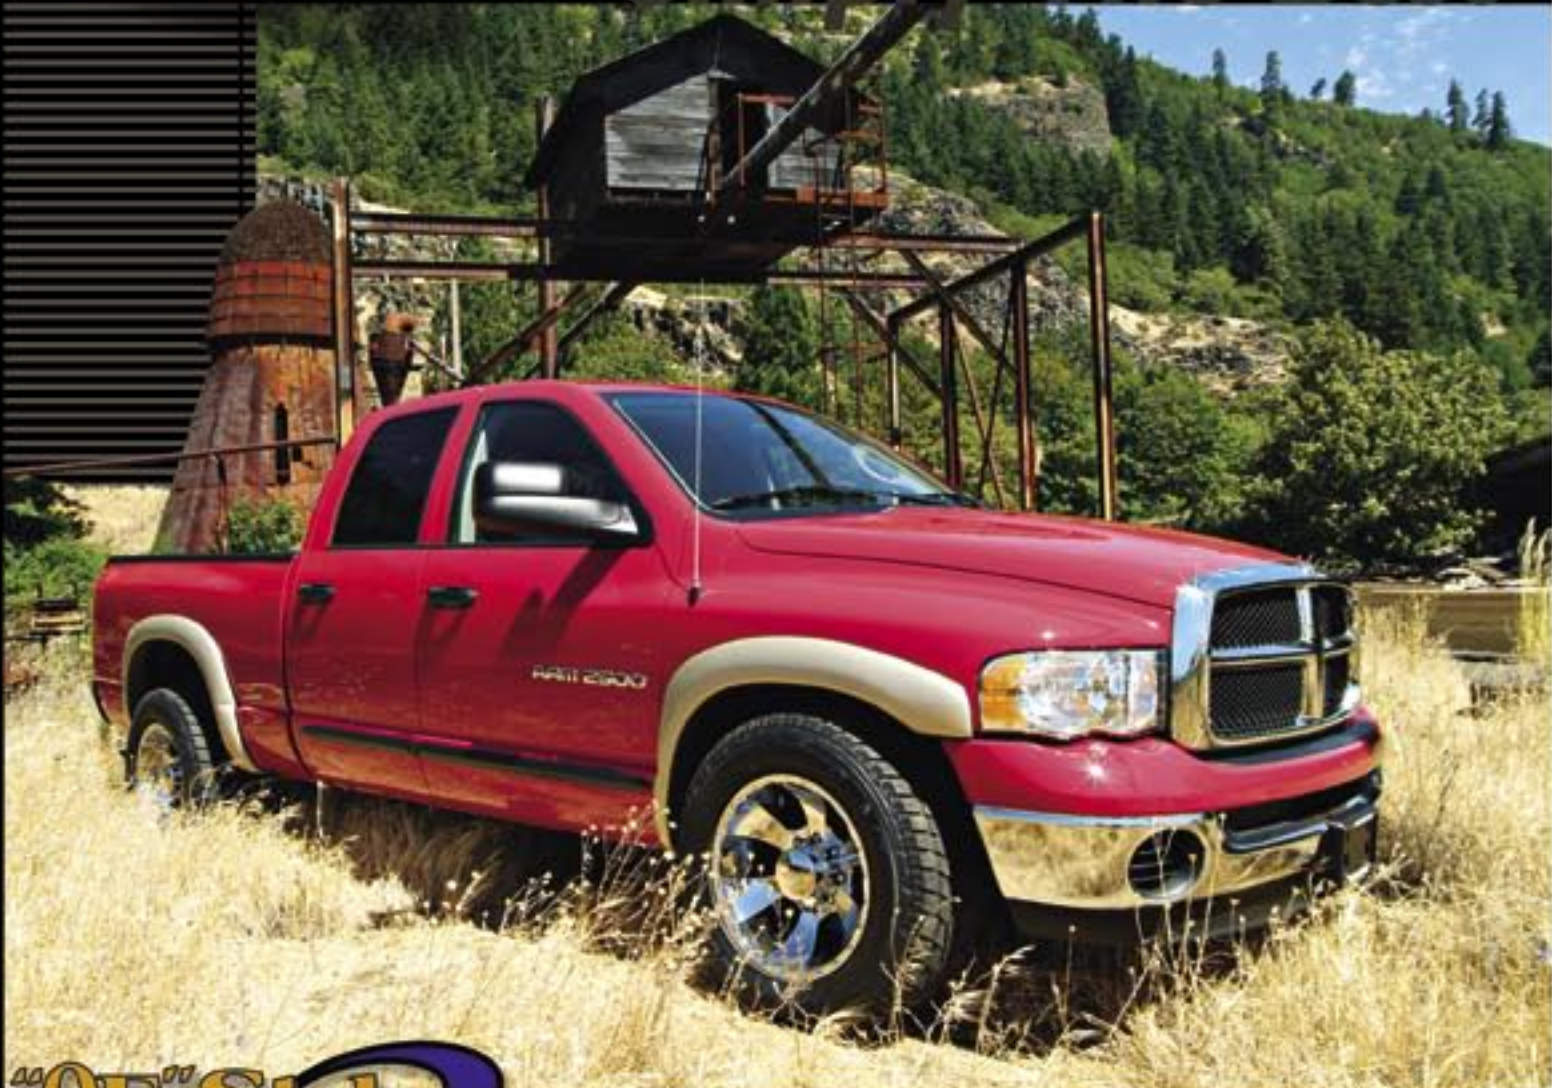

“OE” Style
FENDER FLARES

2002-up Dodge Ram 1500, 2003-up 2500/3500 — OE Style® Flares #50905-02

*Determination Moves You.
Style Captivates You.
Success Frees You.
Passion Keeps You.
Reputation Provokes You.*

OE Style Fender Flares

“OE” Style
FENDER FLARES



2003-up Chevy Silverado
OE Style® Flares #40915-02

Bushwacker “OE” Style Fender Flares offer truck and SUV owners the factory look in an aftermarket flare. This unique line of fender flares lets you add style and protection, upgrading your vehicle in minutes. Installation is easy on most vehicles with our No-Drill application process.



OE Style® Fender Flares Key Points

- Simplified design makes installation fast using Tuf-Lok® fasteners and our No-Drill application process
- Great with stock or custom tire and wheel packages
- Sleek, curved design wraps under the vehicle for factory-installed styling
- 100% UV protection. No chalking, No cracking, No warping
- OEM matte black finish, or easily custom painted to match or accent any vehicle

"OE" Style
FENDER FLARES

"OE" Style
FENDER FLARES



1999-up Ford Super Duty
OE Style® Flares #20909-02



OE Style Flares

2003-up Chevy Avalanche
(without cladding)
OE Style® Flares #40920-02



1999-2002 Chevy Silverado
1999-up GMC Sierra
OE Style® Flares #40907-02



1994-2001 Dodge Ram 1500
1994-2002 Dodge Ram 2500/3500
OE Style® Flares #50903-02



1999-2002 Chevy Sportside
1999-up GMC Sportside
OE Style® Flares #40909-02



2000-up Chevy Tahoe
OE Style® Flares #40910-02



2000-up Chevy Suburban
OE Style® Flares #40908-02



1988-1998 Chevy/GMC
OE Style® Flares #40904-01



2000-2002 GMC Yukon XL
OE Style® Flares #40913-02



2000-up GMC Yukon
OE Style® Flares #40912-02

2000-up Toyota Landcruiser
OE Style® Flares #30901-02



2001-up Toyota Highlander
OE Style® Flares #30904-02



2001-up Toyota Sequoia
OE Style® Flares #30903-02



1996-02 Toyota 4Runner
OE Style® Flares #30905-02
Comes with running board boots



2000-up Ford Excursion
OE Style® Flares #20910-02



1995-99 Chevy Tahoe 2dr
OE Style® Flares #40904-01





2003-up Chevy Silverado — Extend-A-Fender® #40916-02

*Determination Moves You.
Style Captivates You.
Success Frees You.
Passion Keeps You.
Reputation Provokes You.*

Extend-A-Fender Flares



2004-up Ford F-150
Extend-A-Fender® #20915-02

Bushwacker Extend-A-Fender Flares are great for larger tire and wheel packages, which may require additional coverage. They give you that "Limited Edition" look for a fraction of the cost, plus extra protection from road debris.



Extend-A-Fender® Flares Key Points

- Adds additional coverage, great for large wheel and tire packages
- 100% UV protection. No chalking, No cracking, No warping
- Exclusive Dura-Flex 2000® gives maximum Durability and Flexibility
- OEM matte black finish, or easily custom painted to match or accent any vehicle



Extend-A-Fender Flares



2002-up Dodge Ram 1500
2003-up Dodge Ram 2500/3500
Extend-A-Fender® #50904-02



1999-2002 Chevy Silverado
1999-up GMC Sierra
Extend-A-Fender® #40906-02



1996-2002 Toyota 4Runner
Extend-A-Fender®
Limited Edition Package #31401-02



1997-up Dodge Durango
Extend-A-Fender® #51904-02



1997-2003 Ford F150, 250
Light Duty Extend-A-Fender®
Front #20033-11
Rear #20034-11



1984-1996 Jeep Cherokee 2&4 DR
Extend-A-Fender® #10905-11



1992-1999 Chevy Suburban
Extend-A-Fender®
#40013-01 Front
40014-01 Rear
Extended Coverage



1994-01 Dodge Ram 1500
1994-2002 Dodge Ram 2500/3500
Extend-A-Fender® Front #50009-11
Rear #50010-11



2001-2003 Ford Super Crew
Extend-A-Fender® #20913-02



2000-up Chevy Tahoe
Extend-A-Fender® #40911-02



1997-up Dodge Dakota - Reg,
Club & Quad Cab
Extend-A-Fender®
#51905-02



2000-2002 Toyota Tundra
Extend-A-Fender® #30902-02



1999-up Ford Super Duty F-250/350/450 — Pocket-Style® Flares #20914-02

*Determination Moves You.
Style Captivates You.
Success Frees You.
Passion Keeps You.
Reputation Provokes You.*



2003-up Chevy Silverado
Pocket Style Flares® #40918-02

Bushwacker's new line of Pocket Style Fender Flares gives you the bold look of pockets without drilling or cutting into your vehicle! This exclusive line of flares installs using the existing factory vehicle holes and gives the look of being bolted onto the side of the vehicle. Decorative stainless steel hardware adds to the tough aggressive look of this hot new flare lineup.



Pocket Style® Flares Key Points

- No vehicle body side drilling or cutting - installs using the existing factory holes
- 100% UV protection. No chalking, No cracking, No warping
- Comes complete with decorative stainless steel hardware for a "bolt-on" look without touching the vehicle's surface
- Adds additional tire coverage
- OEM matte black finish, or easily custom painted to match or accent any vehicle





Pocket Style Flares

Simply The Best



1997-up Jeep Wrangler TJ
Pocket Style® Flares #10908-07



2004-up Ford F150
Pocket Style Flares® #20916-02



2002-up Dodge Ram 1500
2003-up Dodge Ram 2500/3500
Pocket Style Flares® #50907-02



Cut-Out Flares



1984-96 Jeep Cherokee XJ 4DR
Cut-Out Flares® #10911-07

Bushwacker Cut-Out Fender Flares are designed for the most aggressive tire and wheel packages around. With the bold look of Bushwacker "pockets", Cut-Out flares add dramatic styling while allowing you to cut open the wheel well to accommodate for large tire and wheel packages. So, if you're looking for radical styling and want to add monster tires and wheels to your rig, then Bushwacker Cut-Out flares are the answer.



1999-up Chevy/GMC Silverado/Sierra
2001-up HD
Cut-Out Flares® #40051-02 Front
#40052-02 Rear



1999-up Ford Super Duty
Cut-Out Flares®
#20043-02 Front
#20044-02 SB Rear
#20046-02 LB Rear



1955-1976 Jeep CJ-6
and 1976-1986 CJ-7
Cut-Out Flares® #10910-07

Cut-Out® Flares Key Points

- Bushwacker's exclusive bold pocket design and style
- Offers extreme tire and wheel coverage, allowing you to increase the wheel well opening to accommodate large tires and wheels
- Complete with stainless steel hardware for a "bolt on" look
- Exclusive Dura-Flex® material gives maximum durability and flexibility while maintaining its shape during extreme conditions
- OEM matte black finish, or easily custom painted to match or accent any vehicle



BodyGear® BedRail & TailGate Caps



BodyGear®



BedRail Cap Applications

Adding style and protection to your pick-up has never been easier. Bushwacker's full line of BedRail and TailGate caps let you transform your vehicle in minutes.

These custom fit caps are easy to install right out of the box, there is no cutting or drilling required.

The choice is yours with three great designs: **DiamondBack** • **RidgeBack** • **SmoothBack**
You create the look you want and we provide the protection your vehicle needs.



2002-up Dodge Ram - Short Bed, Without Stake Hole Pockets • RidgeBack BedRail Cap #57013 • OE Style® Flares #50905-02



DiamondBack™



RidgeBack™



SmoothBack™

*Determination Moves You.
Style Captivates You.
Success Frees You.
Passion Keeps You.
Reputation Provokes You.*

BedRail Caps Key Points

- 50% more coverage than regular rail caps
- Available "with" and "without" stake hole pockets
- Limited lifetime warranty
- Topper compatible
- Installs with 3M high-bond adhesive tape
- 100% UV protected Dura-Flex material - Will not dent like metal versions of similar products
- OEM matte black finish, or easily custom painted to match or accent any vehicle

BedRail Cap Application		Ridge Part #	Smooth Part #	Diamond Part #	
Chevy/ GMC	Silverado/Sierra 99-up, HD 01-up Long Bed w/Stake Pockets	47001	48001	49001	
	Silverado/Sierra 99-up, HD 01-up Long Bed w/o Stake Pockets	47002	48002	49002	
	Silverado/Sierra 99-up, HD 01-up Short Bed w/Stake Pockets	47003	48003	49003	
	Silverado/Sierra 99-up, HD 01-up Short Bed w/o Stake Pockets	47004	48004	49004	
	Pick Up C/K 88-00 Long Bed w/Stake Pockets	47006	48006	49006	
	Pick Up C/K 88-00 Long Bed w/o Stake Pockets	47007	48007	49007	
	Pick Up C/K 88-00 Short Bed w/Stake Pockets	47008	48008	49008	
	Pick Up C/K 88-00 Short Bed w/o Stake Pockets	47009	48009	49009	
	Pick Up S-10/S-15 94-03 Reg & Ext. Cab, Short Bed w/o Stake Pockets	47014	48014	49014	
Dodge	Pick Up Ram 1500 94-01, 2500, 3500 94-02 Long Bed w/Stake Pockets	57001	58001	59001	
	Pick Up Ram 1500 94-01, 2500, 3500 94-02 Long Bed w/o Stake Pockets	57002	58002	59002	
	Pick Up Ram 1500 94-01, 2500, 3500 94-02 Short Bed w/Stake Pockets	57003	58003	59003	
	Pick Up Ram 1500 94-01, 2500, 3500 94-02 Short Bed w/o Stake Pockets	57004	58004	59004	
	Pick Up Ram 1500 02-up, 2500, 3500 03-up Long Bed w/Stake Pockets	57010	58010	59010	
	Pick Up Ram 1500 02-up, 2500, 3500 03-up Long Bed w/o Stake Pockets	57011	58011	59011	
	Pick Up Ram 1500 02-up, 2500, 3500 03-up Short Bed w/Stake Pockets	57012	58012	59012	
	Pick Up Ram 1500 02-up, 2500, 3500 03-up Short Bed w/o Stake Pockets	57013	58013	59013	
	Pick Up Dakota 97-up Quad Cab w/o Stake Pockets	57009	58009	59009	
Ford	Pick Up Dakota 97-up Regular & Club Cab, Short Bed w/out Stake Pockets	57007	58007	59007	
	Pick Up Ford F-150, 250, 350 92-96, HD F-250, 350 97-98 Long Bed w/Stake Pockets	27001	28001	29001	
	Pick Up Ford F-150, 250, 350 92-96, HD F-250, 350 97-98 Long Bed w/o Stake Pockets	27002	28002	29002	
	Pick Up Ford F-150, 250, 350 92-96, HD F-250, 350 97-98 Short Bed w/Stake Pockets	27003	28003	29003	
	Pick Up Ford F-150, 250, 350 92-96, HD F-250, 350 97-98 Short Bed w/o Stake Pockets	27004	28004	29004	
	Ranger 93-up Short Bed w/Stake Pockets	27008	28008	29008	
	Ranger 93-up Short Bed w/o Stake Pockets	27009	28009	29009	
	Pick Up Tacoma 95.5-up Reg & Xtra Cab w/o Stake Pockets	37001	38001	39001	
	Tundra 00-up Long Bed w/Stake Pockets			39004	
Toyota	Tundra 00-up Long Bed w/o Stake Pockets			39005	
	Tundra 00-up Short Bed w/Stake Pockets			39006	
	Tundra 00-up Short Bed w/o Stake Pockets			39007	
	Mazda	Mazda 93-97 w/Stake Pockets	27008	28008	29008
		Mazda 93-97 w/o Stake Pockets	27009	28009	29009

Tailgate Cap Application		Smooth Part #	Diamond Part #
Chevy/ GMC	Pick Up Silverado/Sierra 99-up, HD 01-up TailGate Cap	48005	49005
	Pick Up C/K 88-00 TailGate Cap	48010	49010
	Pick Up S-10/S-15 94-03 TailGate Cap	48015	49015
Dodge	Pick Up Ram 1500 94-01, 2500, 3500 94-02 TailGate Cap	58005	59005
	Pick Up Ram 1500 02-up, 2500, 3500 03-up TailGate Cap	58006	59006
Ford	Dakota 97-up TailGate Cap	58008	59008
	Pick Up Ford F-150, 250, 350 92-96, HD F-250, 350 97-98 TailGate Cap	28005	29010
Toyota	Ranger 93-up TailGate Cap	28010	29010
	Pick Up Tacoma 95-1/2 and up TailGate Cap	38002	39002
Mazda	Tundra 00-up TailGate Cap		39008
	Mazda 93-97 TailGate Cap	28010	29010

Note: Smooth Tailgate Cap recommended for use with Ridgeback BedRail Cap Applications



Make	Model	Sets	Front	Rear	Set	Front	Rear	Set	Front	Rear	Set	Front	Rear	Set	
Chevrolet GMC	Pick Up 67-72											40015-11	40016-11		
	Pick Up 73-80					40001-01	40002-01	40900-01				40003-11	40004-11		
	— Optional Flare Style											40021-11+	40022-11+		
	Pick Up Stepside 73-80					40001-01	40006-01					40003-11	40020-11		
	Pick Up 81-87					40001-01	40002-01	40900-01				40019-11++	40004-11		
	— Optional Flare Style					40017-11	40018-11					40023-11+	40022-11+		
	Pick Up Stepside 81-87					40001-01	40006-01					40019-11++	40020-11		
	Pick Up C/K 88-98 1500, 2500, 3500 Series	40501-02	40027-01	40028-01	40904-01	40007-01	40008-01	40901-01			40919-02		40009-11	40010-11	
	— Optional Flare Style					40013-01	40014-01								
	Pick Up C/K 99-00 2500, 3500 Series	40501-02	40027-01	40028-01	40904-01	40007-01	40008-01	40901-01			40919-02		40009-11	40010-11	
	— Optional Flare Style					40013-01	40014-01								
	Pick Up Sportside C/K 88-98					40007-01	40012-01								
	Pick Up Sportside, Chev Silverado 99-02, and HD 01-02/GMC Sierra 99-up, HD 01-up			40033-02	40042-02	40909-02									
	Pick Up Chev Silverado 99-02, and HD 01-02/GMC Sierra 99-up, HD 01-up	40503-02	40033-02	40034-02	40907-02						40917-02		40051-02	40052-02	
	Pick Up Chev Silverado 99-02, and HD 01-02/GMC Sierra 99-up, HD 01-up	40504-02 front only													
	Pick Up Silverado/HD 03-up	40507-02	40053-02		40915-02		40055-02		40916-02	40059-02		40918-02			
	Suburban 67-72												40015-11	40016-11	
	Suburban 73-80						40001-01	40002-01	40900-01				40003-11	40004-11	
	— Optional Flare Style												40021-11+	40022-11+	
	Suburban 81-87						40001-01	40002-01	40900-01				40019-11++	40004-11	
	— Optional Flare Style						40017-11	40018-11					40023-11+	40022-11+	
	Suburban 88-91						40017-11	40018-11					40019-11++	40004-11	
	— Optional Flare Style												40023-11+	40022-11+	
	Suburban 92-99	40501-02	40027-01	40028-01	40904-01	40007-01	40008-01	40901-01			40919-02		40009-11	40010-11	
	— Optional Flare Style					40013-01	40014-01								
	Suburban 00-up	40505-02			40908-02										
	Blazer, Jimmy 73-80						40001-01	40002-01	40900-01				40003-11	40004-11	
	— Optional Flare Style												40021-11+	40022-11+	
	Blazer, Jimmy 81-87						40001-01	40002-01	40900-01				40019-11++	40004-11	
	— Optional Flare Style						40017-11	40018-11					40023-11+	40022-11+	
	Blazer, Jimmy 88-91						40017-11	40018-11					40019-11++	40004-11	
	— Optional Flare Style												40023-11+	40022-11+	
	Blazer, Jimmy 92-94	40501-02	40027-01	40028-01	40904-01	40007-01	40008-01	40901-01			40919-02		40009-11	40010-11	
	— Optional Flare Style					40013-01	40014-01								
	Tahoe, Yukon 2dr 95-99	40501-02	40027-01	40028-01	40904-01	40007-01	40008-01	40901-01			40919-02		40009-11	40010-11	
	— Optional Flare Style					40013-01	40014-01								
	Tahoe, Yukon 4dr 95-99	40502-02			40905-02				40903-11						
	Tahoe 4dr 00-up	40506-02			40910-02				40911-02						
	Yukon 4dr 00-up				40912-02										
	(molding behind rear wheel well must be removed prior to installation)														
	Yukon XL 00-up				40913-02										
	(on 02-up fits with body side molding behind rear door & rear wheel)														
Yukon XL 02-up	40505-02			40908-02											
(fits models w/o bodyside moldings behind rear door & rear wheel)															
Avalanche 03-up (without cladding)				40920-02											
Pick Up S-10/S-15 82-93						41005-01	41006-01	41902-01				41009-11	41010-11		
— Optional Flare Style												41019-11+	41020-11+		
Pick Up S-10 94-03, Regular Cab & Extended Cab Only	41502-02					41023-11	41024-11	41907-11							
S-10 /S-15 Blazer, Jimmy 2dr 82-94						41005-01	41008-01	41903-01				41009-11	41012-11		
— Optional Flare Style												41019-11+	41022-11+		
S-10/S-15 Blazer, Jimmy 4dr 91-94								41904-11							
S-15 Sonoma 94-03, Regular Cab & Extended Cab Only	41503-02					41025-11	41024-11								
Blazer 2dr 95-04	41502-02							41907-11							
Blazer 4dr 95-04								41905-11							
Full Size Van 78-95						42001-01	42002-01								
Astro, Safari Van 85-94						43001-01***	43002-01***								

See Page 27 for Key Chart

Flare Applications



Make	Model	Sets	Front	Rear	Set	Front	Rear	Set	Front	Rear	Set	Front	Rear	Set
Dodge	Ramcharger, Trailduster, Pick Up 2wd & 4wd 72-80					50001-01	50002-01	50900-01				50005-11+	50006-11+	
	Ramcharger, Trailduster, Pick Up 2wd & 4wd 81-93					50003-01	50004-01	50901-01				50007-11+	50006-11+	
	Pick Up Ram 1500 94-01, Ram 2500, 3500 94-02	50501-02	50011-02	50012-02	50903-02	50009-11	50010-11							
	Pick Up Ram 1500 02-up, Ram 2500, 3500 03-up	50504-02	50015-02		50905-02	50013-02	50014-02	50904-02	50017-02	50018-02	50907-02			
	Pick Up Dakota 87-96					51003-01	51004-01	51902-01						
	Pick Up Dakota 97-up, Regular Cab, Club & Quad Cab	51501-02						51905-02						
	Dodge/Plymouth Full Size Van 79-93					52001-01***	52002-01***							
	Dodge Raider 2dr 87-91							101901-11***						
	Durango 97-up							51904-02						
	Ford	Pick Up Full Size 73-79					20003-01	20004-01†	20900-01				20013-11	20014-11†
Pick Up Full Size Stepside 73-79						20003-01	20006-01***							
Pick Up Full Size 80-86						20009-01	20010-01	20902-01				20011-11	20012-11	
Pick Up Full Size 87-91						20015-01	20016-01	20903-01				20017-11	20018-11	
Pick Up Full Size 92-96 F-150, 250, 350, 450		20501-02				20019-11	20020-11	20904-11				20021-11+	20022-11+	
Pick Up Full Size 97-98, Heavy Duty F-250 and Heavy Duty 350, 450		20501-02				20019-11	20020-11	20904-11				20021-11+	20022-11+	
Pick Up Full Size Flare Side 92-96						20019-11	20028-11***							
Pick Up Full Size 97-03 F-150 250 Light Duty		20502-02				20033-11	20034-11							
Pick Up Full Size 01-03 F-150 250 Super Crew								20913-02						
Pick Up Full Size 04-up F-150 Reg/Super Cab and Super Crew New Body Style Except Flareside						20051-02		20915-02	20053-02		20916-02			
Pick Up Full Size 04 F-150 Heritage Only		20502-02				20033-11	20034-11							
Pick Up Full Size Super Duty 99-up, F-250 and 350, 450 Short Bed		20504-02	20039-02	20040-02	20909-02						20914-02	20043-02	20044-02	
Pick Up Full Size Super Duty 99-up, F-250 and 350, 450 Long Bed		20504-02	20039-02	20040-02	20909-02						20914-02	20043-02	20046-02	
Pick Up Full Size Super Duty 99-up, F-250, 350, 450, 550		20505-02 fronts	20039-02							20049-02	20914-02	20043-02		
Bronco 66-77												20001-07	20002-07	
Bronco 66-77 (Extra Large CO, 5" Additional Opening)													20005-07	
Bronco 78-79												20013-11	20014-11	
Bronco 80-86												20011-11	20012-11	
Bronco 87-91												20017-11	20018-11	
Bronco 92-96		20501-02										20021-11+	20022-11+	
Bronco II 83-88												21007-11	21010-11	
Bronco II 89-90												21013-11	21010-11	
Excursion 4dr 00-up		20507-02				20910-02								
Expedition 97-02		20503-02							20907-11					
Explorer 4dr 91-92									21906-11					
Explorer 4dr 93-94									21907-11					
Explorer 4dr 95-97		21503-02††							21911-11§					
Explorer 4dr 98		21503-02††												
Explorer Sport Track 4dr 00-up											21913-02			
Pick Up Ranger 82-88							21003-01	21004-01	21901-01				21007-11	21008-11
Pick Up Ranger 89-92						21011-01	21012-01	21903-01				21013-11	21008-11	
Pick Up Ranger 93-up	21501-02 93-97 only				21912-02	21021-01	21022-01	21910-01				21027-11	21028-11	
Ranger Splash, Flareside 93-up	21501-02 93-97 only				21912-02	21021-01	21022-01	21910-01						
Econoline Van 75-91						22001-01	22002-01							
Econoline Van 92-03 Swing door						22003-11	22004-11							
Econoline Van 92-03 Sliding door						22003-11	22006-11							
Honda	Passport 95-97							91901-11						
	Scout II 72-80					60001-01	60002-01							
	Pick Up 2wd & 4wd 88-95					91005-01	91006-01	91902-01						
	Rodeo 91-97							91901-11						
Intl.	Trooper 4dr 88-91							91900-11						
	Trooper 4dr 92-97							91903-11						
Isuzu														

Flat-Top® Panel Flares		
Make	Model	Sets
Jeep	CJ-5/CJ-6 52-83	10902-12
	CJ-7 76-86	10901-12
	Wrangler YJ 87-96 (without step)	10900-12

See Page 27 for Key Chart

Flare Applications



Make	Model	Sets	Front	Rear	Set	Front	Rear	Set	Front	Rear	Set	Front	Rear	Set	
Jeep	Square Fender 40-64					10015-04	10020-04								
	CJ-5 52-83, CJ-6 55-81, CJ-7 76-86					10010-04	10020-04								
	CJ-6 55-76, CJ-7 76-86													10910-07	
	Cherokee XJ 2dr 84-96, Comanche MJ Pick up 85-92														10912-07
	Cherokee XJ 2dr & 4dr 84-96					10025-11	10026-11	10905-11							
	Cherokee XJ 4dr 84-96														10911-07
	Wrangler YJ 87-96 (without step)											10903-11Δ			10909-07
	Wrangler TJ 97-up 4.75" Flare														10917-07
	Wrangler TJ 97-up 6" Flare											10906-02Δ			10908-07
	Wrangler TJ 97-up "EURO Rubicon® Conversion Package"														10913-07
Mazda	Pick Up 2wd 86-92					81003-01	81004-01	81901-01							
	Pick Up 4wd 87-93												81005-11f	81006-11f	
	Pick Up 2wd & 4wd 98-03				81904-02										
Mitsubishi	Pick Up 78-86					51001-01***	51002-01***	51900-01***							
	Pick Up 2wd 87-96					51005-01***	51006-01***	51901-01***							
	Montero 4dr 87-91													101900-11***	
	Montero 2dr 87-91													101901-11***	
	Montero 4dr 92-97													101902-11¶***	
	Montero 2dr 92-97													101903-11***	
	Montero Sport 4dr 97-03	101501-02													
Nissan	Pick Up 80-86					71003-01	71004-01	71901-01							
	Pick Up 2wd 86-1/2 to 97					71005-01	71006-01	71902-01							
	Pick Up 4wd 86-1/2 to 97					71007-01	71006-01	71903-01							
	Pick Up 4wd 86-1/2 to 97, Regular Cab Only												71011-11+	71012-11+	
	Pathfinder 2dr 87-95					71007-01	71008-01	71904-01							
	Pathfinder 4dr 90-95							71905-01							
	Pathfinder 4dr 96-99	71501-02													
Toyota	Pick Up 4wd 79-83												31005-11f	31006-11f	
	Pick Up 2wd 79-83					31003-01***	31004-01***	31901-01***							
	Pick Up 2wd Domestic Bed 84-88					31007-01	31008-01	31903-01							
	Pick Up 2wd Import Bed 84-88					31007-01	31012-01								
	Pick Up 4wd Domestic Bed 84-88					31011-01	31008-01	31902-01					31009-11	31010-11	
	Pick Up 4wd Import Bed 84-88					31011-01	31012-01						31009-11	31010-11	
	Pick Up 2wd 89-95					31015-01	31016-01	31905-01							
	Pick Up 4wd 89-95					31017-01	31016-01	31906-01					31019-11f	31020-11f	
	Toyota Hi-Lux 98-up Double Cab Only					31043-02	31042-02	31918-02							
	Pick Up T-100 93-98	31507-02				31023-11	31024-11	31910-11							
	Pick Up Tundra 00-02							30902-02							
	Pick Up Tundra 03-up Regular and Extended Cab Only							30906-02							
	Pick Up Tundra 04-up Double Cab Only							30907-02							
	4Runner 84-89					31011-01	31014-01	31904-01					31009-11	31022-11f	
	4Runner 2dr & 4dr 90-95					31017-01§	31018-01§	31907-11§							
	4Runner 96-02*	31508-02¢			30905-02†††			31913-11							
	4Runner 96-02 Limited Edition Package: Cladding & Flares							31401-02							
	— 4Runner w/Factory Chrome Running Boards 96-02 Boots: Required for 31913-11 and 31401-02							35-16001-11							
	Pick up Tacoma 2wd 95-1/2 to 1/1/00	31501-02					31031-11	31030-11	31912-11						
	(will NOT fit PreRunner)														
Pick Up Tacoma 2wd 1/1/00-up	31502-02				31914-02										
Pick Up Tacoma 4wd, 2wd PreRunner 95-1/2 and up	31502-02				31914-02										
Landcruiser 62-84														30002-07	
Landcruiser 00-up					30901-02										
Rav4 4dr 01-up					31915-02										
Sequoia 01-up					30903-02										
Highlander 01-up					30904-02										

f Cut-Out style flare but no sheet metal removal required. † will not fit F350 camper special
 § fits vehicles without factory running boards †† will fit vehicles equipped with black or chrome factory
 *** non stocking item allow 3 to 4 weeks for delivery running boards
 Δ ex flare 6" wide ++ fits horizontal marker light
 ¢ fits w/out factory running board, must have SR5 splash guard + no pocket cut outs
 †† will fit vehicles equipped w factory running boards only. ¶ will only fit with factory cladding package

Flare Applications



For Customer Service Call:

800-234-8920

www.bushwacker.com



Simply The Best

Fender Flares, BedRail & TailGate Caps

Corporate & Manufacturing Offices:
BUSHWACKER, INCORPORATED
6710 North Catlin Avenue, Portland, Oregon 97203
Tel: 503-283-4335 Fax: 503-283-3007

BUSHWACKER®, Street Flares®, OE Style®, Extend-A-Fender®, Pocket Style®, and DURA•FLEX® are registered trademarks of BUSHWACKER, Incorporated. All rights reserved. All other trademarks are the property of their respective owners. Product specifications are subject to change.

This is BUSHWACKER Catalog No. 1103.

Printed in USA.

Copyright © 2003 BUSHWACKER, Inc.

BSH-610 50M 10/03

AVAILABLE AT:

